



JINAN LIJIANG AUTOMATION EQUIPMENT CO.,LTD.  
ADD: No.10,Hehai Industrial Park,Meilibei Road,Jinan,China  
TEL:+86-531-85960498 FAX:+86-531-87562846

## 间隔条折弯机安装要求清单

### List of Installation Requirements of Automatic Spacer Bending Machine

由于不同设备所需要安装条件和工具不同，为提高工作效率，节省双方时间，特附《机器安装要求清单》一份。希望客户能给予配合，在我方技术人员到场之前准备好清单上所列条目，以便人员到位后可以立刻开展工作.谢谢您的合作！

Due to the different installation conditions and tools required by different equipment, in order to improve work efficiency and save time on both sides, a copy of the 《Machine Installation Requirements List》 is attached as below. We hope that the customer can cooperate and prepare the items listed on the list before the technicians arrive. So that the technicians can start working immediately after the arrival. Thank you for your cooperation!

请提供如下 Please provide as below:

1. 厂地须不小于 11\*3 米的空间 The place where the machine can be installed should not be less than 11\*3
2. 提前安装好电源，根据设备型号准备 220V 或 380V。Install the power source in advance with 220V or 380V of voltage according to different devices
3. 提前安装好气源，需要 0.6-0.8mpa，气管直径 10 毫米。Install the air source in advance with 0.6-0.8 Mpa of air pressure, 10mm of the diameter of the air pipe
4. 激光水平仪一个 A laser level meter
5. 调试用不同规格的铝条 Various specification of aluminum bars for debugging